

304.8mm




 When expecting freezing temperatures, timers should be removed from the hose faucet and stored indoors to avoid potential freeze damage.

Diagram of the Rain Delay Station with labels:

- HOSE TAP CONNECTION
- LOW BATTERY INDICATOR
- STATION
- ARROW
- RESET
- DIAL
- OUTLET 1
- RAIN DELAY
- OUTLET 2
- MANUAL / CLEAR
- +/- BUTTONS
- FILTER


The diagram shows a digital display on the left with the word 'OFF' in large, bold, black characters. To the right of the display is a rotary switch with a circular face. The switch has eight positions labeled: 'OFF', 'LOCK', 'START TIME', 'AUTO', 'LOCK', 'START TIME', 'AUTO', and 'LOCK'. A green dashed line extends from the 'OFF' position on the display to the 'OFF' position on the rotary switch, indicating the correct setting.

INSTALLING THE BATTERIES

- NOTE:** Firmly replace the battery tray to ensure water resistance and increase battery life. You will know the battery tray is fully inserted if it does not

PROGRAMMING THE TIMER

 SET CLOCK AND DAY

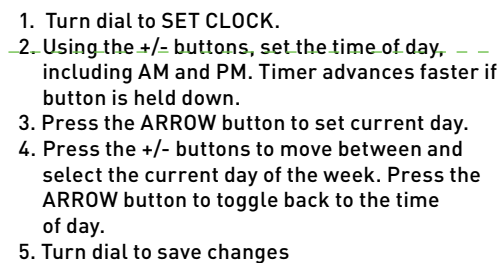


A digital clock and a circular dial. The digital clock shows "START TIME AM 5:00". The circular dial has segments labeled "START TIME", "LOCK 60", "WASH 10", "90", "AUTO", "SET CLOCK", and "120".

NOTE: *To remove a start time press CLEAR.*

4. Press the **STATION** button to move through stations; 1 or 2.
5. Press the **+ / -** buttons to toggle the stations on/off. Note: All stations are automatically selected when a start time is added.
Press the **-** button to toggle a station off.
6. Repeat steps 2 - 5 to program additional start times.
7. Turn dial to **save changes**.

NOTE: *Only one start time is required.*

 - Raw Part Num: 24695-24 rA**
Size (in.): 12" W x 6" H
Size (mm): 304.8 W x 152.4 H
Material: Bleached paper
Basis Weight: 18 lbs Caliper: 3.6 Mil
Package Format: Instruction Sheet
100% Scale
Outside-face
Outside Color: White
Date: 1/29/2014
Designer: J. Smolarski

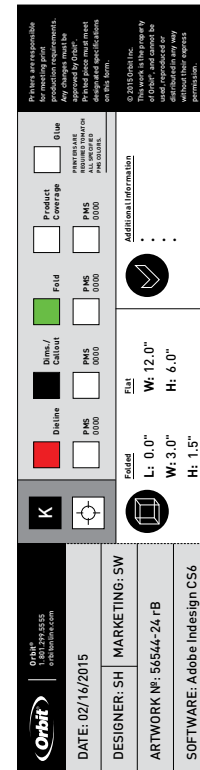

 
6.4mm




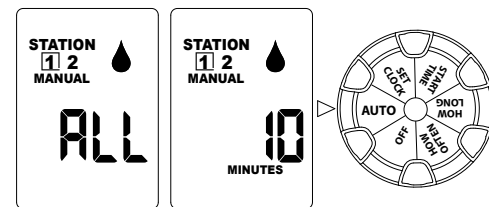 
- DAYS OF THE WEEK - SELECT SPECIFIC DAYS YOU WANT TO WATER:**

- INTERVAL - SELECT AN INTERVAL PERIOD
YOU WANT TO WATER:**

Your timer is now programmed. Turn your dial to AUTO to allow your timer to water according to programmed time, station, duration, and frequency.

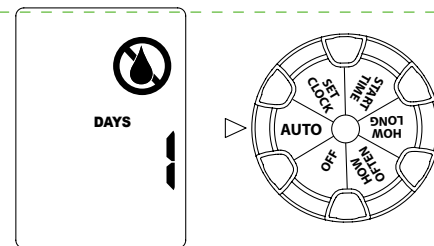

1. With the dial on AUTO, press the  button.
2. Using the +/- buttons select a delay of 1 to 7 days.
3. Screen will flash between clock and hours remaining before programmed cycle resumes.
4. To remove rain delay, turn dial to OFF and then back to AUTO.



1. There are two ways to manual water: all stations as programmed or selected stations.

- NOTE:** There may be a slight delay between the time the manual button is pressed and when watering begins.

- ## TROUBLESHOOTING

- Clock is set to correct time, including AM and PM.
- Dial is set to "Auto"
- Start time is set to desired time, including AM and PM.
- Rain Delay is on.

Check it:

 
- WATER WON'T TURN OFF.**

- HOW LONG is set to desired time.
- HOW OFTEN is set to desired interval hour or day.

- Minimum: 10 psi
- Maximum: 100 psi

- Maximum: Do not exceed 120°F
- Minimum: Keep from freezing

For outdoor use with cold water only.
Not for use with appliances.



© 2015 Orbit Irrigation Products, Inc.
All rights reserved. All trade names are registered
trademarks of respective manufacturers listed.

Raw Part Num: 24695-24 rA
Size (in.): 12" W x 6" H
Size (mm): 304.8 W x 152.4 H
Material: Bleached paper
Basis Weight: 18 lbs Caliper: 3.6 Mil
Package Format: Instruction Sheet
100% Scale
Outside-face
Outside Color: White
Date: 1/29/2014
Designer: J. Smolarski